

# Chromebook Tips and Tricks

## Getting on Wi-Fi

1. At the bottom right, select the time
2. Select Not Connected (Note: If you see your Wi-Fi network name and a signal strength, your Chromebook is already connected to Wi-Fi.)
3. Turn on Wi-Fi
4. Your Chromebook will automatically look for available networks and show them to you in a list



## Acceso a Wi-Fi

1. En la parte inferior derecha, selecciona la hora
2. Seleccione No conectado (Nota: Si ve el nombre de su red Wi-Fi y la intensidad de la señal, su Chromebook ya está conectada a Wi-Fi)
3. Enciende el Wi-Fi
4. Su Chromebook buscará automáticamente las redes disponibles y se las mostrará en una lista.

## Logging In

1. Your child's username is their school ID number
2. Your child probably knows their password. If they do not, please contact your child's teacher

Denton SSO


  
  

[Help, I forgot my password](#)

## Iniciar sesión

1. El nombre de usuario de su hijo es el número de identificación de su escuela.
2. Su hijo probablemente sabe su contraseña. Si no lo hacen, comuníquese con el maestro de su hijo.

## Changing the language on the Chromebook to spanish Cambiar el idioma de la Chromebook a español

1. En la parte inferior derecha, seleccione la hora
2. Seleccionar configuración  > Avanzado
3. En la sección "Idiomas y entrada", seleccione Idioma
4. Encuentra el español.
5. Junto al idioma que deseas, selecciona Más
6. Elija cómo desea usar este idioma:
  - a. Mostrar menús en este idioma: Seleccione
  - b. Mostrar texto del sistema en este idioma, luego seleccione Reiniciar. La próxima vez que inicie sesión, los menús se mostrarán en el idioma que elija.
  - c. Mostrar páginas web en este idioma: seleccione Mover a la parte superior para mover el idioma a la parte superior de la lista. Si desea que Google Chrome traduzca automáticamente páginas web, haga clic en Ofrecer para traducir páginas en este idioma.




### Zoom in or magnify your Chromebook screen

- To make the page bigger: Press Ctrl and Plus
- To make the page smaller: Press Ctrl and Minus.
- Reset zoom: Press Ctrl and 0.



### Fix My Chromebook... My Screen is Sideways!

1. On your **Chromebook** keyboard, hold down Control + Shift + **the** circular arrow (in **the** top row of **the** keyboard) ... this will rotate **the screen** 90 degrees.
2. Press Control + Shift + **the** circular arrow again to keep rotating your **screen**... Repeat until it's back in **the** right direction!

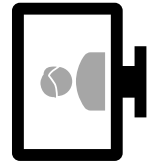

**Device not turning on:** If the device does not come on when the lid is opened try these steps.



- 1 Close the lid, plug in the power cable, let it sit for a couple minutes and then open the lid and see if the device comes on.
- 2 If the device still does not come on, then press and hold the power button for about 5-10 seconds until the screen lights up and the device starts up then release the power button.
- 3 If the device still does not come on then unplug the power cable, press and hold down the refresh and power button together for at least 30 seconds. Then close the lid, plug the power cable back into the device and then open the lid. If the device does not start up on its own, then press and hold the power button for 5-10 seconds until the screen lights up and the device starts up and then release the power button.
- 4 Once the device turns on and is operating normally then check in the lower right corner and see if the battery is charged up. If it is then you can safely unplug the device at this point and continue using it. If you check and the battery is low, then leave the device plugged in while you use it so that the battery can recharge.
- 5 If after trying these steps the device still does not come on, then close the lid and leave the device plugged in and let it charge for about 30 minutes to an hour and then repeat the steps listed above.

### Chromebook isn't working well and needs to be reset

1. Sign out of your Chromebook
2. Press and hold Ctrl + Alt + Shift + r
3. Select Restart
4. In the box that appears, select Powerwash > Continue
5. Follow the steps that appear and sign in with your DISD account (See **Logging In** Instructions)



Remember to plug the power cord into the device and keep it charged over night or when it is not being used to keep the battery charged.



**Remember to always log out of Chromebook before shutting down. Closing the lid will not log you out or shut down Chromebook.**

